


DCR-10

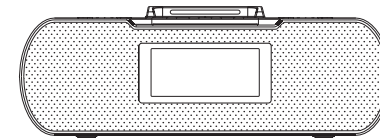

GB

Version 2



“Made for iPod” means that an electronic accessory has been designed to connect specifically to iPod respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod may affect wireless performance.

iPod, iPod classic, iPod nano, iPod shuffle, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

Table of contents

<i>Important safety instructions</i>	2-3	<i>Display and Audio Setup</i>	49-54
<i>Introduction</i>	4	<i>Information</i>	55-57
<i>Controls</i>	5-8		
<i>Remote control function</i>	9-10		
<i>Using the radio for the first time</i>	11		
<i>Operating your radio for the first time – DAB+</i>	12		
<i>Selecting a station / Secondary services – DAB+</i> ...	13-14		
<i>Display modes – DAB+</i>	15-16		
<i>Finding new stations – DAB+</i>	17		
<i>Manual tuning – DAB+</i>	18		
<i>Station order setup – DAB+</i>	19-20		
<i>Dynamic Range Control (DRC) setting – DAB+ only</i>	21		
<i>Operating your radio – Search tuning FM</i>	22		
<i>Manual tuning & FM stereo / mono</i>	23-24		
<i>Display modes – FM</i>	25-26		
<i>Presetting stations / Recalling a preset station –</i> <i>DAB+ & FM</i>	27-28		
<i>Scan sensitivity setting – FM</i>	29		
<i>Using your radio's Rewind feature</i>	30		
<i>Using SD card</i>	31-35		
<i>iPod docking</i>	36-40		
<i>Clock and Alarms</i>	41-48		

GB

Important safety instruction

1. Read and understand all safety and operating instructions before the radio is operated.
2. Retain instruction: The operating instructions should be retained for future reference.
3. Heed warnings: All warnings on the appliance and operating instructions should be followed.
4. Follow all operations and use instructions.
5. Ventilation: this radio should be situated so that its location or position does not interfere with its proper ventilation. For example, the radio should not be used on a bed, sofa, rug or other soft surfaces that may block the ventilation openings. It should not be placed in a built-in situation like a cabinet that may reduce airflow through the ventilation openings.
6. Water and moisture: the appliance should not be used near water. Do not use near a bathtub, washbowl, laundry tub, kitchen sink, wet basement, swimming pool, etc.
7. Do not place the radio on an unstable cart, stand, bracket or table. The radio may fall, causing serious physical injury and damage to the radio.
8. Unplug the radio from the AC power outlet before cleaning. Use only a damp cloth for cleaning the exterior of the radio.
9. Mains adaptor: The mains adaptor should be positioned so it is not walked on, pinched, or items placed on top of it. Pay particular attention to wires at plugs, convenience receptacles, and the point where they exit from the unit. Unplug the mains adaptor by gripping the adaptor, not the wire. Operate the radio using only the current type of power source indicated. If you are not sure of the type of power source supply to your home, consult your dealer or local power company.
10. Do not attempt to service the receiver yourself. Removing the cover may expose you to dangerous voltage, and will void the warranty.
11. Power sources: The radio should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your radio dealer or power company.


Introduction

The Sangean DCR-10 DAB + / FM-RDS / SD Card Record / Aux-in Digital Tuning Clock Radio comes with the following range of features:

- ⦿ Radio for DAB+ and FM (with RDS) broadcasts.
- ⦿ 10 radio station presets (5 for DAB+ and 5 for FM).
- ⦿ Rewind DAB+/FM via SD card.
- ⦿ Plays MP3/MP2/AAC/WMA files from an SD card and can also play its own recordings in WAV format.
- ⦿ iPod cradle plays and charges iPods.
- ⦿ Two alarm timers with snooze to wake you either with radio alarm, iPod, or buzzer alarm (Human Wake System).
- ⦿ Adjustable sleep timer which can be set to turn the clock radio off after between 15 and 120 minutes.
- ⦿ Easy to read LCD display with adjustable backlight.
- ⦿ A 3.5mm stereo Auxiliary Input socket for playing audio from MP3 players, iPod devices or other audio equipment; a standard 3.5mm headphone socket for private listening.
- ⦿ Equipped with 6 sets of EQ settings, tone control (bass/treble) and bass reflex tube to enhance the sound performance.
- ⦿ External FM wire spring aerial for better reception.

GB

Controls and connections

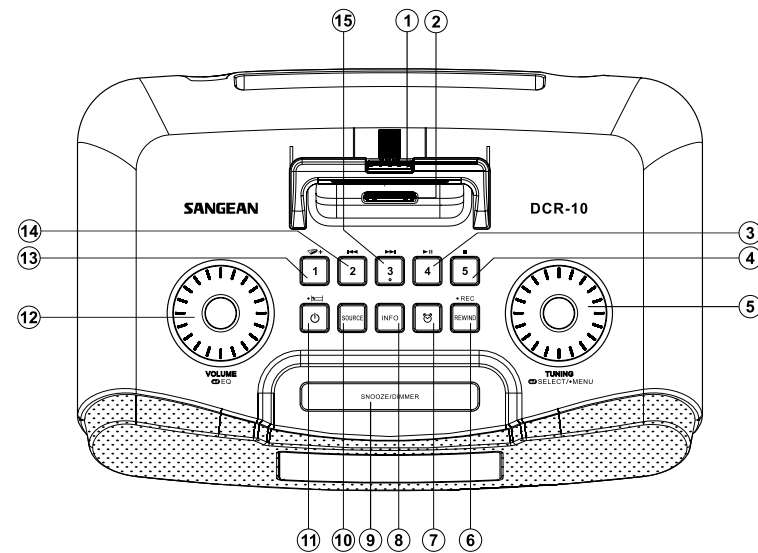


1. iPod Universal Dock Adjuster
2. iPod Dock connector
3. Preset 4 / Play/pause
4. Preset 5 / Stop
5. Tuning control / Select button
6. Rewind / Record button
7. Alarm button
8. Info button

9. Snooze / Dimmer button
10. Source
11. Standby / Sleep button
12. Volume / Tone control
13. Preset 1 / Folder down
14. Preset 2 / Back forward
15. Preset 3 / Fast forward

Controls and connections


GB

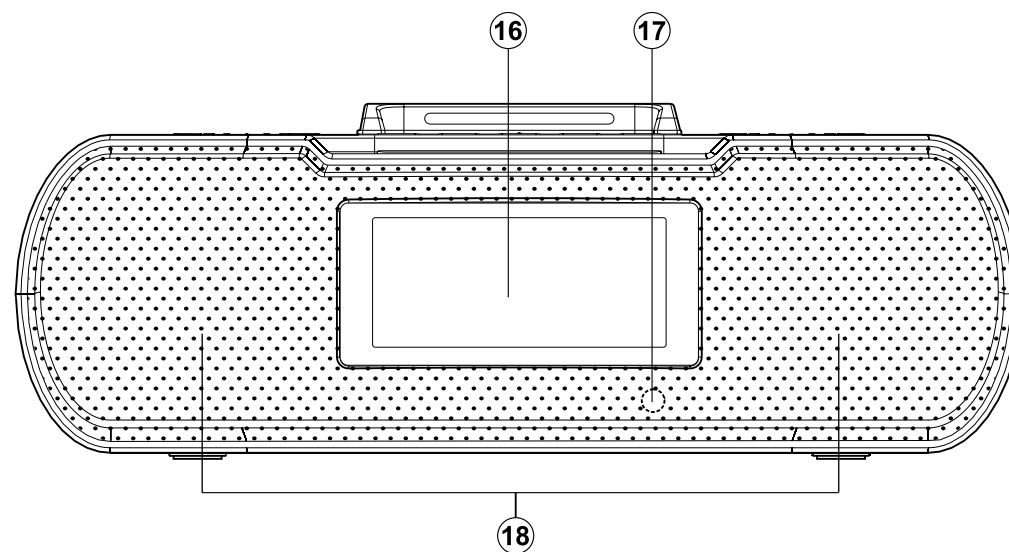

- 16. LCD display
- 17. Remote control sensor

- 18. Loudspeakers

Controls and connections

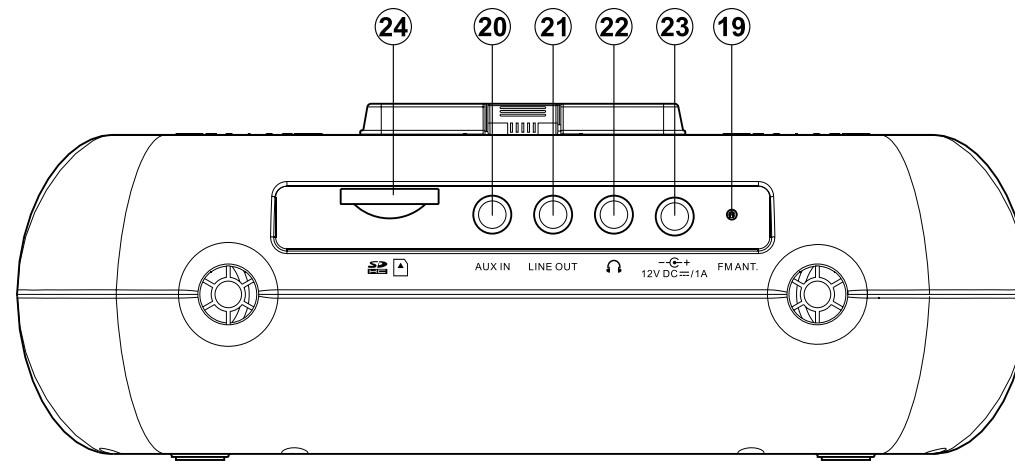


- 19. FM antenna
- 20. Aux in socket
- 21. Line out socket

- 22. Headphone socket
- 23. DC in socket
- 24. SD card slot

Display icons


- A. PM indicator
- B. Time display
- C. Signal bar
- D. RDS icon
- E. CT (clock time) icon
- F. Alarm 2 icon
- G. Alarm 1 icon
- H. Frequency / information for station display
- I. DAB+/FM band icon
- J. Sleep timer / Snooze icon

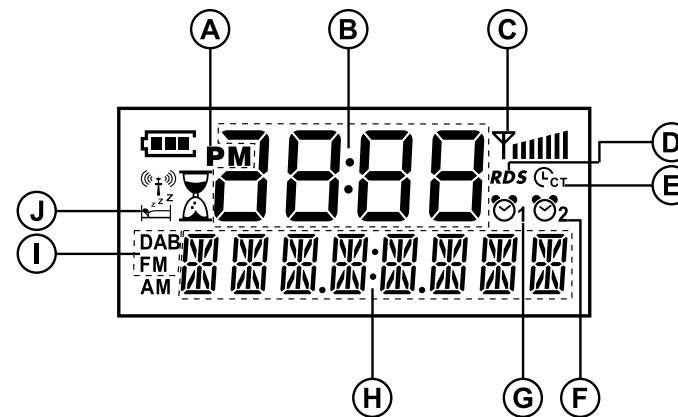

GB

Remote control

- A. On / Standby button
- B. Mute button
- C. Key pad buttons 1-10/0
- D. Folder Up button
- E. Tuning Down / Rewind button
- F. Menu button
- G. Repeat button
- H. Media button
- I. Sleep / Clock set button
- J. Record button
- K. Equalizer button
- L. Alarm button
- M. Radio button
- N. Auto tune button
- O. Random repeat button
- P. Play / Pause button
- Q. Folder Down button
- R. Tuning Up / Fast forward button
- S. Select / Stop button
- T. Info button
- U. Volume Up / Down buttons

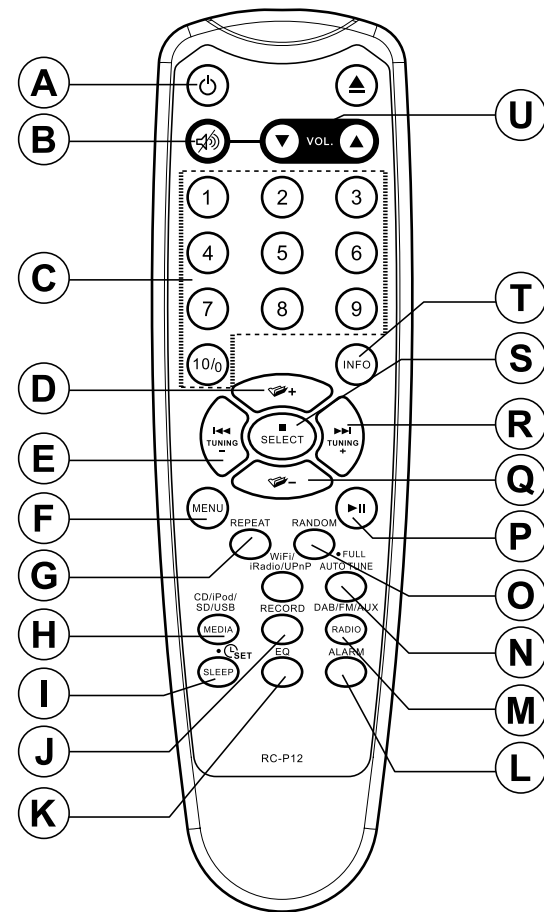


Remote control battery replacement

1. Remove the battery cover on the rear of your remote control by applying pressure to the catch in the direction shown by the arrow in the diagram, and then lifting the cover.
2. Insert 2 x AAA size batteries into the compartment. Make sure the (+) and the (-) ends of the batteries are positioned as shown inside the compartment.
3. Close the battery cover by inserting the retaining lugs first, then apply pressure to the free end such that the catch latches the cover securely.
4. If the remote is not to be used for an extended period of time it is recommended that the batteries are removed.

IMPORTANT:

The batteries should not be exposed to excessive heat such as sunshine, fire or the like. After use, disposable batteries should if possible be taken to a suitable recycling centre. On no account should batteries be disposed of by incineration.

1. Battery compartment
2. Latch
3. Retaining lugs (inside)

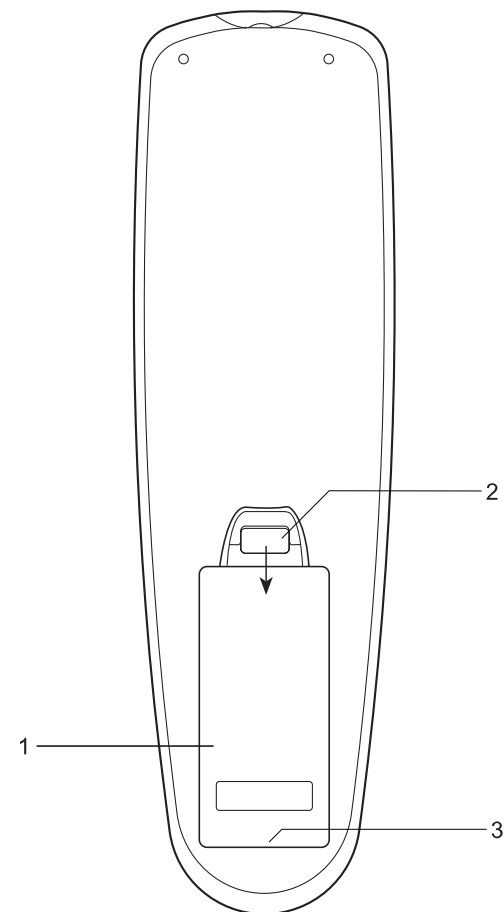

GB


Using the radio for the first time

1. Place your radio on a flat surface.
2. Plug the mains lead into the mains socket located on the back of your radio ensuring that the plug is pushed fully into the socket.
3. Plug the other end of the mains lead into the wall socket.

IMPORTANT:

The mains plug is used as the means of connecting the radio to the mains supply. The mains socket used for the radio must remain accessible during normal use. In order to disconnect the radio from the mains completely, the mains plug should be removed from the mains socket outlet completely.

4. When your radio is first switched on the clock display will show SANGEAN and the unit will enter standby mode.







SANGEAN

Operating your radio – DAB+

1. If your radio is in standby mode, press the Standby/Sleep button to switch it on.
2. Press and release the Source button to select DAB+ mode. The display will show "TUNING" for a few seconds.
3. If this is the first time the radio is used a quick scan of the DAB+ channels may be carried out (depending on whether scanning was already completed in standby mode.) If the radio has been used before, the last used station will be selected.
4. When first switched on, the first station in the list of stations will be shown. Press the Select button to tune to this station or rotate the Tuning control to select an alternative station. The display will show the station name on the lower line of the text display.
5. If the stations list is still empty after the scan operation or if the selected station cannot be received your radio will display "OFF AIR".
6. If no signals are found it may be necessary to relocate your radio to a position giving better reception.

Note that radio station name and frequency displays shown in this user guide may differ from those that you see on your radio. Broadcasters may change radio station names that are transmitted, and the frequencies used for DAB+ and FM radio stations may not be the same in all parts of the country.

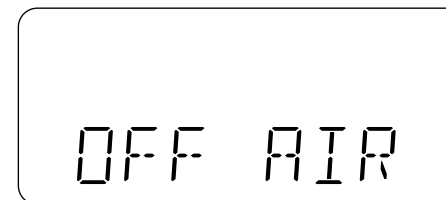
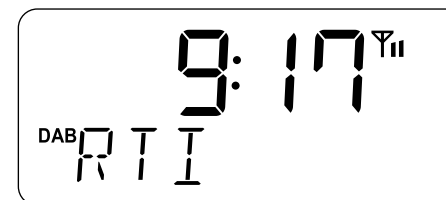
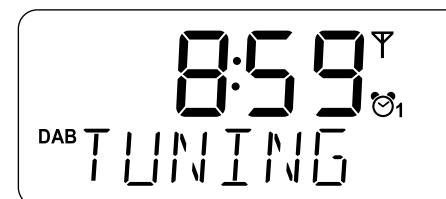
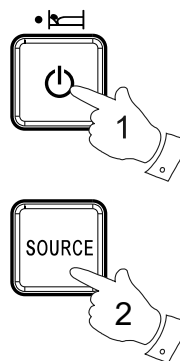


GB

Selecting a station – DAB+



1. When the unit is in DAB+ mode the lower line of the text display normally shows the name of the station currently tuned.
2. Rotate the Tuning control to scroll through the list of available stations on the lower line of the text display. Stop rotating the Tuning control when you find the station that you wish to hear.
3. Press and release the Select button to cause the radio to tune to the chosen station. The display may show "TUNING" while your radio finds the new station.
4. Adjust the Volume control to the required setting.

If after selecting a station the display shows "OFF AIR" it may be necessary to relocate your radio to a position giving better reception.

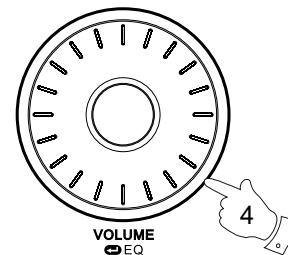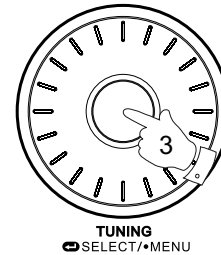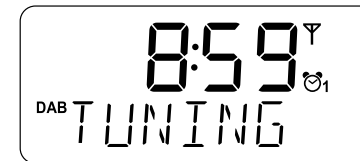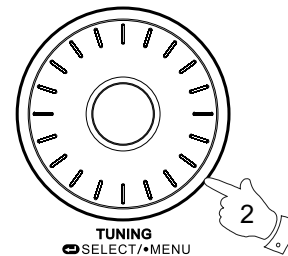

Secondary services – DAB+

1. Certain radio stations may have one or more secondary services associated with them. If a station has a secondary services associated with it the display will show ">>" next to the station name on the station list. The secondary service will then appear immediately after the primary service as you rotate the Tuning control.
2. Press and release the Select button to select the station.

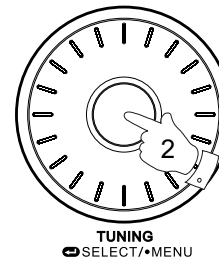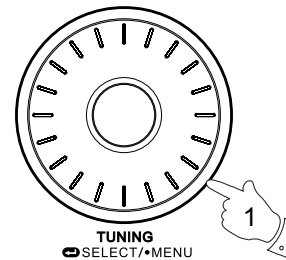






GB

Display modes – DAB+

When in DAB+ mode your radio has a range of display options.

1. Press the Info button repeatedly to cycle through the various modes.




- | | |
|-------------------|---|
| a. Scrolling text | Displays scrolling text messages such as artist/track name, phone in number, etc. |
| b. Program type | Displays the type of station being listened to e.g. Pop, Classic, News, etc. |
| c. Multiplex Name | Displays the name of the multiplex to which the current station belongs. |
| d. Time | Displays the current time. |
| e. Date | Displays the current date. |

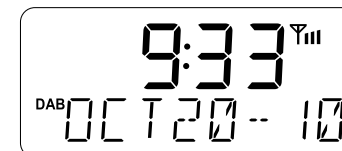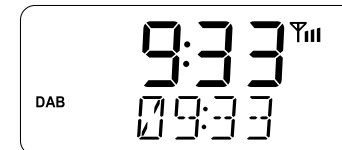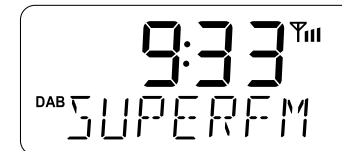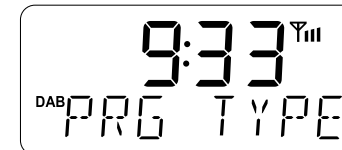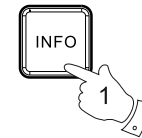



- | | |
|------------------------|--|
| f. Channel & frequency | Displays the channel number and frequency for the current DAB+ radio station. |
| g. Bit rate | Displays the digital bit rate for the current DAB+ radio station. |
| h. Audio type | Displays the audio type of the station being listened to. |
| i. Signal strength | Displays signal strength for the station being listened to. The clear rectangle shows the minimum required signal strength for clear DAB+ reception. |


GB

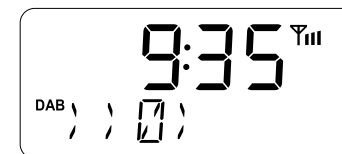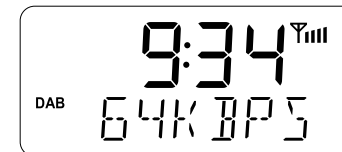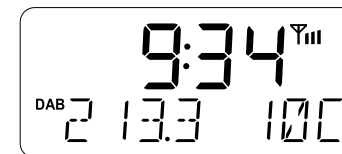

Finding new stations – DAB+

As time passes new stations may become available. To find new stations proceed as follows:

1. With the unit in DAB+ mode press and hold the Tuning control to enter the main menu. Rotate the Tuning control until the display show "FUL.SCAN".
2. Press and release the Select button and the radio will perform a scan of the DAB+ frequencies. As new stations are found the station counter on the right hand side of the display will increase and stations will be added to the list.

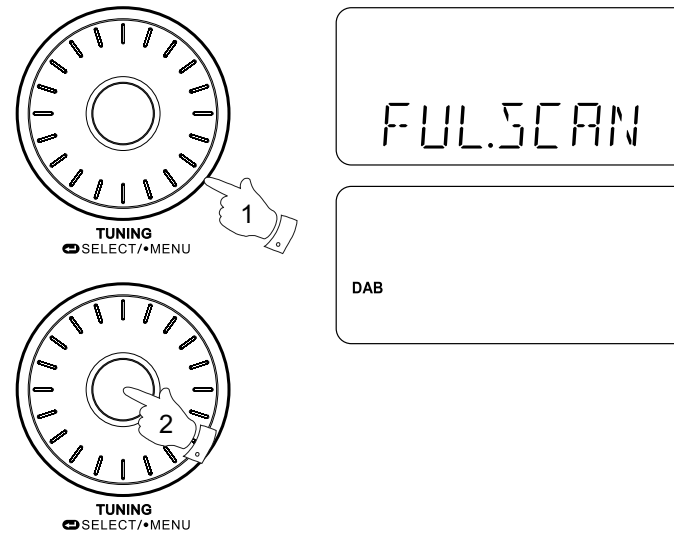


Manual Tuning – DAB+

GB

Manual tuning allows you to tune directly to the various DAB+ channels.

1. Press and hold the Tuning control so that the display shows "STA.LIST".
2. Rotate the Tuning control until "MANUAL" appears on the display. Press and release the Select button.
3. Rotate the Tuning control to select the required DAB+ channel.
4. Press and release the Select button to select the channel.
A signal strength display will appear. The clear rectangle shows the minimum required signal strength for clear DAB+ reception.
5. Any new stations that are found are automatically added to the stored list of stations.
6. Press and release the Select button to return to normal tuning mode.

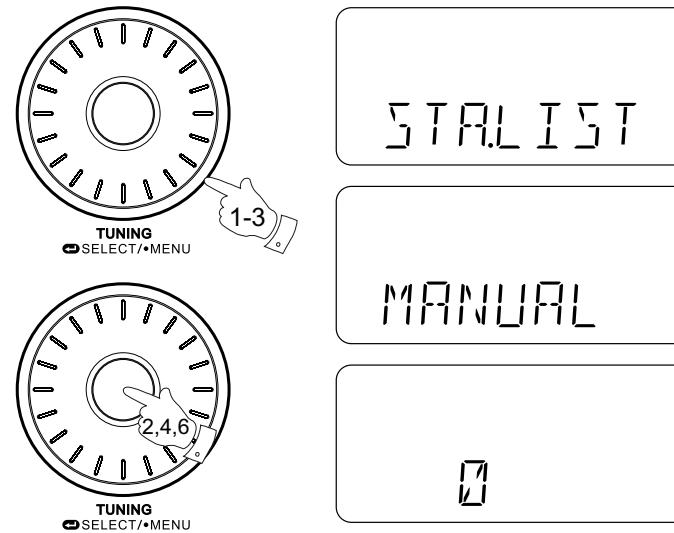


Station order setup – DAB+

Your radio has 3 station order settings from which you can choose. The station order settings are, alphanumeric, ensemble and valid.

Note: The default station order setting is alphanumeric.

1. Press and hold the Tuning control so that “STA.LIST” appears on the display.
2. Rotate the Tuning control until “STA.ORDER” appears on the display. Press the Select button to enter the station order selection menu.
3. Rotate the Tuning control to choose between alphanumeric, ensemble and valid.

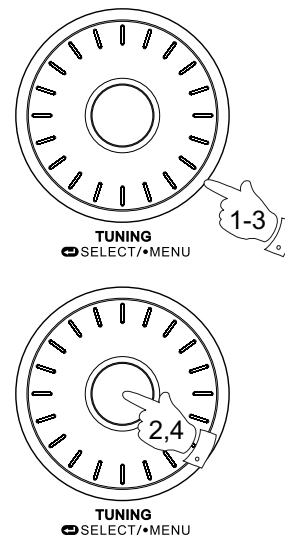

Alphanumeric

Rotate the Tuning control until "ALPHA." appears on the display.
This option will cause DAB+ stations to be listed in alphanumeric order 0....9 A....Z.

Ensemble

Rotate the Tuning control until "ENSEMBLE" appears on the display.
This mode organizes the station list by DAB+ multiplex.

Valid

Rotate the Tuning control until "VALID" appears on the display.
The display will show only those DAB+ stations for which a signal can be found.

4. Press and release the Select button to select the station order setting required.

ALPHA.

ENSEMBLE

VALID

GB


Dynamic Range Control (DRC) settings

DRC can make quieter sound easier to hear when your radio is used in a noisy environment. This function is only for the DAB+ waveband.

1. Press the Standby/Sleep button to switch on your radio.
2. Press and hold the Tuning control so that "Sta.List" appears on the display.
3. Rotate the Tuning control until the display shows "DRC Val".
4. Press and release the Select button to enter the DRC adjustment mode.
5. Rotate the Tuning control to select the required DRC setting (the default is 0).
 - DRC 0 DRC is switched off, Broadcast DRC will be ignored.
 - DRC 1/2 DRC level is set to 1/2 that sent by broadcaster.
 - DRC 1 DRC is set as sent by broadcaster.
6. Press and release the Select button to confirm the setting.
The display will then return to the previous radio display mode.



Note:

Not all DAB+ broadcasts are able to use the DRC function. If the broadcast does not support DRC, then the DRC setting in the radio will have no effect.


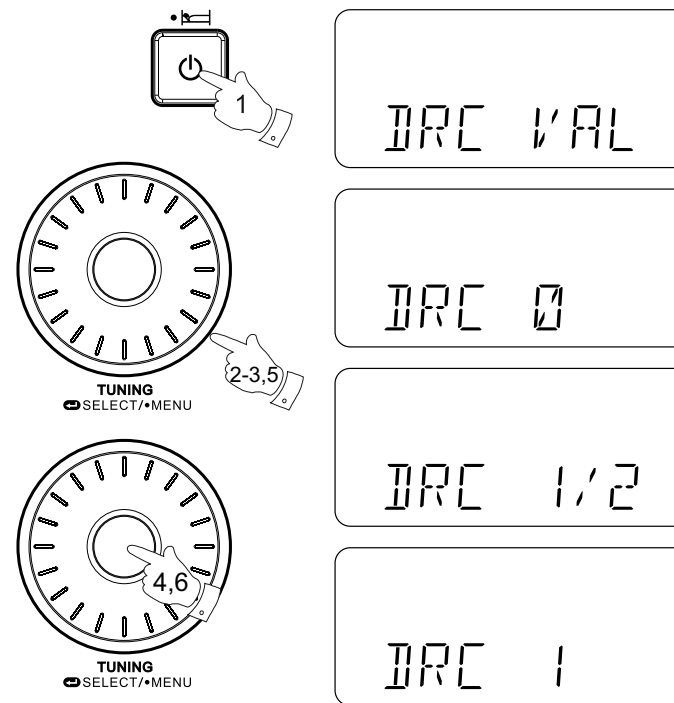


Operating your radio – Search tuning FM

1. Fully extend the FM wire spring aerial.
2. Press the Standby/Sleep button to switch on your radio.
3. Press and release the Source button until the FM band is selected.
4. Press and release the Select button to cause your radio to scan in the direction upwards and stop automatically when it finds a station of sufficient strength.
5. After a few seconds the display will update. The display will show the frequency of the signal found. If the signal is strong enough and there is RDS data preset then the radio will display the station name.
6. To find additional stations press and release the Select button as before.
7. When the end of the waveband is reached your radio will recommence tuning from the opposite end.
8. Adjust the Volume control to the required setting.
9. To switch off your radio press the Standby/Sleep button.




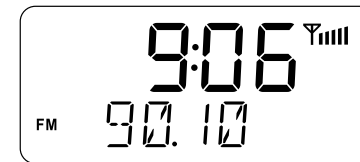
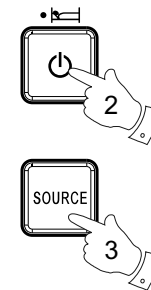


GB

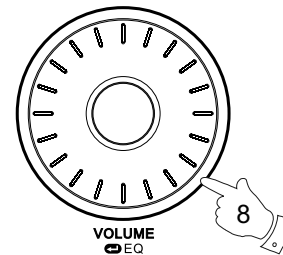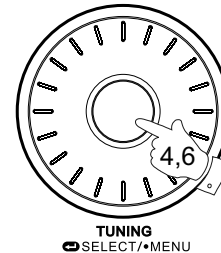



Manual tuning – FM

1. Press the Standby/Sleep button to switch on your radio.
2. Press and release the Source button to select the FM band and fully extend the wire spring aerial for optimal FM reception.
3. Rotate the Tuning control to tune to a station. The frequency will change in steps of 50kHz.
4. When the end of the waveband is reached the radio will recommence tuning from the opposite end.
5. Set the Volume control to the desired setting.
6. To switch off your radio press the Standby/Sleep button.

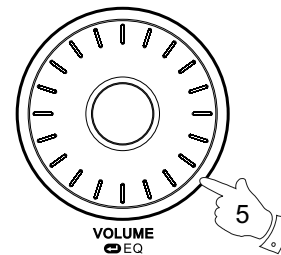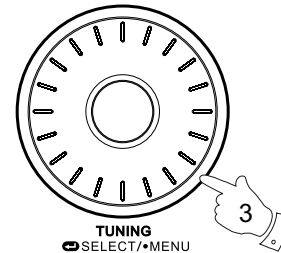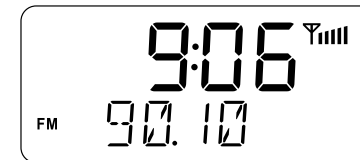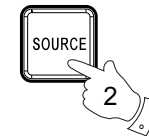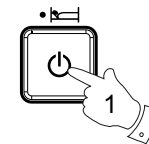

FM stereo / mono

1. If an FM station is received with a weak signal some hiss may be audible. To reduce the hiss press and hold the Tuning control, and rotate the Tuning control until "FM AUDIO" appears on the display. Press the Select button to enter the setting. Rotate the Tuning control to select Mono and press the Select button. Your radio will switch to mono mode.
2. To return to stereo mode rotate the Tuning control to choose Auto, and press the Select button. The radio will switch to stereo mode.

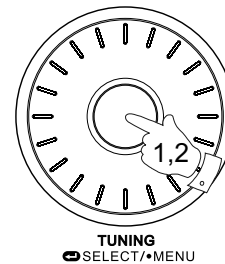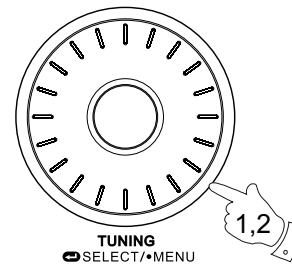

GB




Display modes – FM

Your radio has six display options for FM radio mode. In addition to the audio content of the program, data is broadcast using the Radio Data System (RDS). RDS is a system in which inaudible digital information is added to the normal FM radio transmission.

In FM mode the lower line of the text display can be set to any of the following options. If RDS data is received, the lower line of the text display is used to show the radio station name.

1. Press the Info button repeatedly to cycle through the various modes.

- a. Radio Text Displays radio text messages such as news items etc.
- b. Program Type Displays the type of station being listened to e.g. Pop, Classic, News, etc.
- c. Audio Type Displays the audio type of the station being listened to.

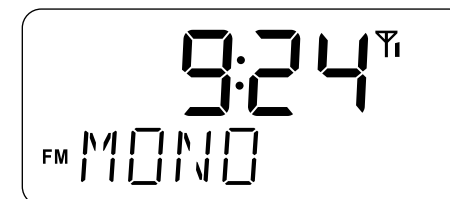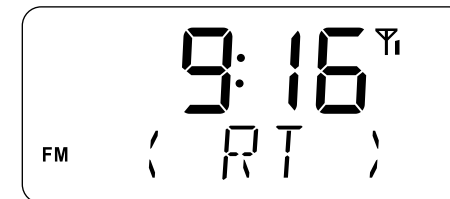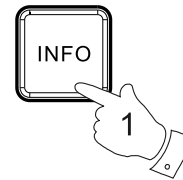



- d. Time Display the current time.
- e. Date Display the current date.
- f. Frequency Display the frequency of the station being listened to.

Note:

When tuned to the FM band, information display is only available when the radio is able to receive RDS information from the broadcaster.

- 2. If there is no RDS data available (or if the signal is too weak) then the radio will display only the FM frequency.


GB

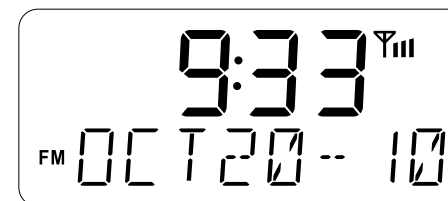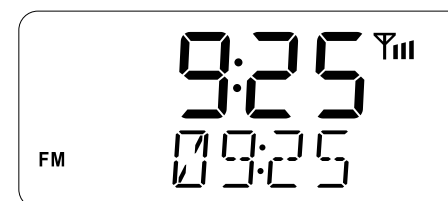

Presetting stations

There are 5 preset stations each for FM and DAB+ radio. They are used in the same way for each waveband.

1. Press the Standby/Sleep button to switch on your radio.
2. Tune to the required station as previously described.
3. Press and hold the required Preset button (1 to 5) until the display shows for example "P3 SAVED". The station will be stored using the chosen preset number. Repeat this procedure for the remaining presets as you wish.
4. Preset memories which have already been stored may be overwritten by following the above procedure if required.

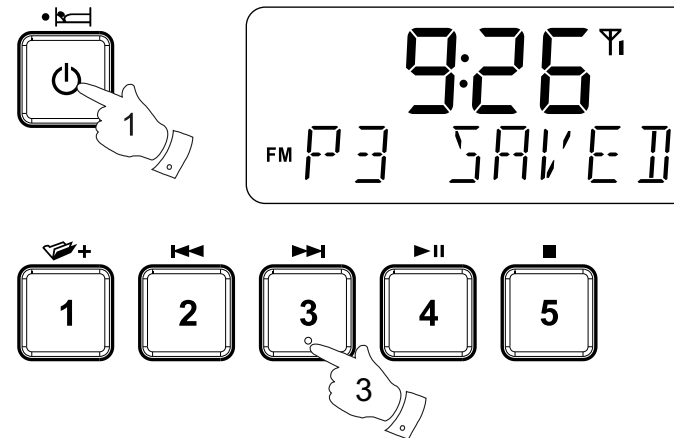


Recalling a preset station

1. Press the Standby/Sleep button to switch on your radio.
2. Select the required waveband by pressing the Source button.
3. Momentarily press the required Preset button (1 to 5) to cause your radio to tune to the station stored in preset memory.

Note:

If you have not previously stored a preset station and the preset button is pressed "P1 EMPTY" for example will be displayed.

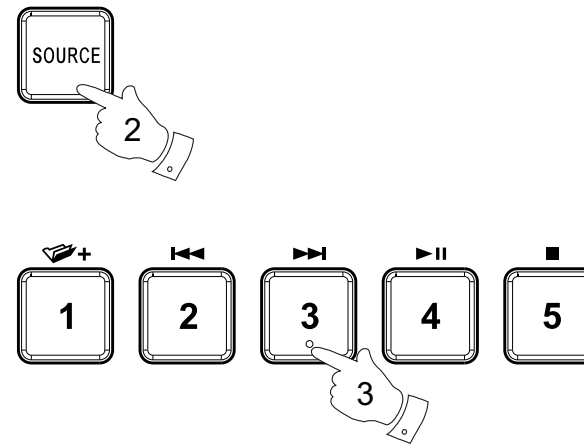


GB

Scan sensitivity setting – FM

Your radio will normally scan for FM broadcasts which are strong enough to give good reception. However, you may wish the Auto-scan function to also be able to find weaker signals, possible from more distant radio transmitters. Your radio includes a local / distant option for the Auto-scan function.

1. Press the Standby/Sleep button to switch on your radio.
2. If needed, press the Source button to select the Source button to select the FM band.
3. Press and hold the Tuning control so that "TIME SET" appears on the display.
4. Rotate the Tuning control until the display shows "SCAN ZON" on the lower line. Press the Select button to enter the scan zone setting.
5. Rotate the Tuning control to switch between Local and Distant options on the lower line of the display. The Distant option will allow the radio to find weaker signals when scanning.
6. Press the Select button to confirm your selection. The radio will then revert to the normal display. The Local or Distant setting is stored in the radio and remains in force until changed or until a System Reset.

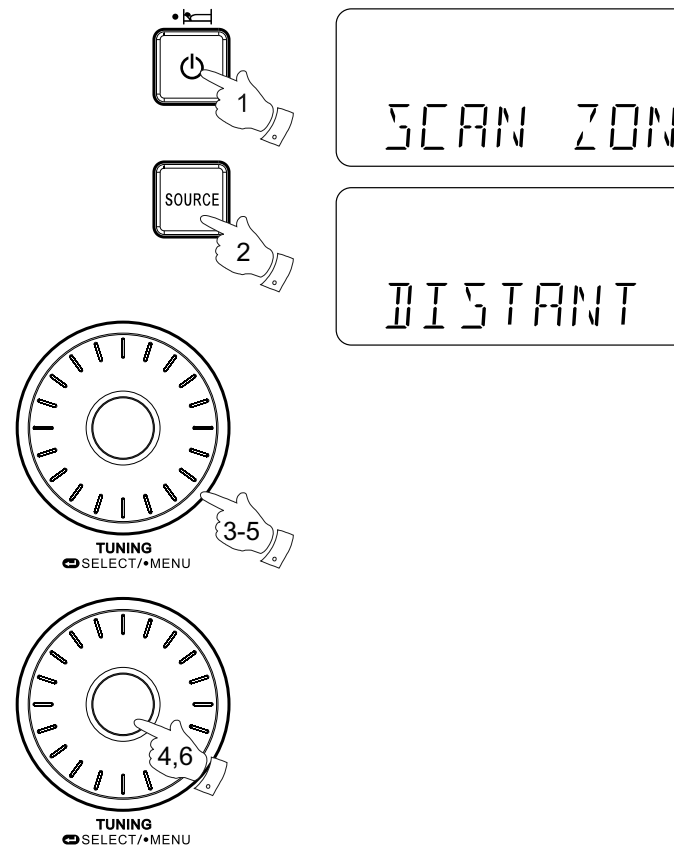

Using your radio's Rewind feature






With a single press of the Rewind button you can put your favorite station on hold while you have been interrupted, whether it being a phone call or other important task. After the interruption is finished, simply press the Rewind button to return to your favorite station exactly where you left off so that you never miss anything.

Radio stations can effectively be put on hold for approx. 16 minutes (999 seconds).

1. Ensure your SD card is inserted correctly.
2. First switch on your radio. Press the Source button to select the desired waveband.
3. To place your radio in Rewind mode simply press and release the Rewind button, the sound from the speaker will be muted. The display will show the "Pause symbol" and the time (seconds) you are delayed by.
4. To return to the radio station that you were listening to simply press and release the Rewind button and your radio will continue playing from where you left off.
5. To return to real time press and hold the Rewind button the display will return to normal radio display.
6. To reach a desired point of the delayed program rotate the Tuning control.

Note:

In order for your radio to carry out the rewind feature, the radio requires at least 30MB in the SD card space.

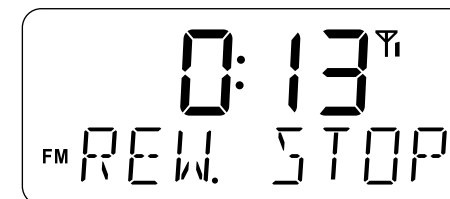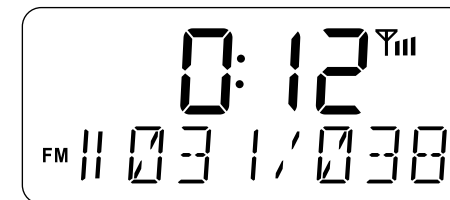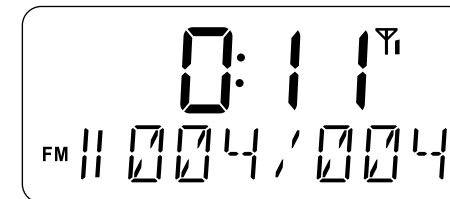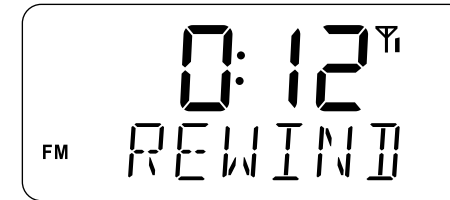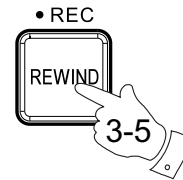

GB

Using SD cards

Secure Digital (SD or SDHC) cards can be used with the DCR-10 for playback of MP3 or WMA files. The DCR-10 can also record to SD and SDHC media in MP3 format.

The DCR-10 has been tested with a range of SD cards. SD cards up to 32GB are supported. However, there are many different card variants available and not all cards can be guaranteed to work in the DCR-10. Memory must use the FAT or FAT32 filing system in order to operate with the DCR-10.

SD card slot is located at the rear of the unit next to the DC in socket.




Inserting and removing SD cards

1. To insert an SD card into your radio, and slid the SD card into the SD card slot. To remove the card push the card in slightly and it will pop out allowing removal.

Note:



The SD card should not be removed during a recording as damage or corruption of files on the card may occur.

2. To select SD card mode press the Source button until the desired mode is shown on the display. "READING" will first appear on the display, and the total number of files and folders on the SD card will be displayed.

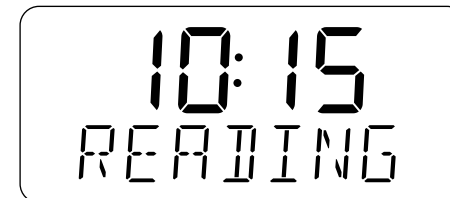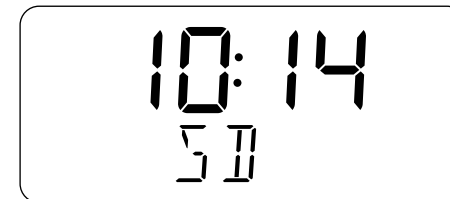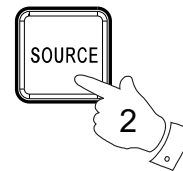

Playing MP3 / WMA files – SD card


1. Press the Play/Pause button to start playing from the SD card.
The display will show the first folder and file numbers – “01” and “001”.
2. To pause playing press the Play/Pause button. To resume playing press the Play/Pause button again.
3. To stop play, press the Stop button. If you put the unit to standby mode without pressing the Stop button, then the next time the unit is switched on it will return to the previously played file.

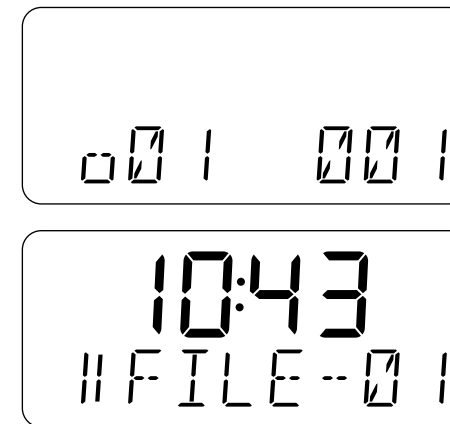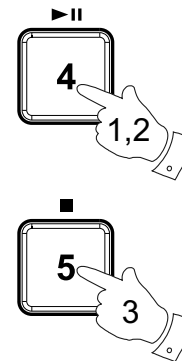

GB


Selecting a file

1. When the SD card is playing, press either the Fast-forward or Rewind buttons to change to the desired file. The file number is updated in the display. If there is more than one folder, when all files in the current folder have been played the next folder will be played.
2. Press the Play/Pause button to play the selected file.

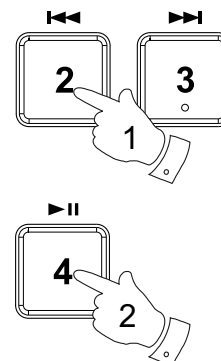



Search function

1. While the SD card is in stop or play mode, press and hold the Fast-forward or Rewind buttons. Release the button when the desired part of the current file is reached.

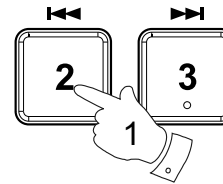

To skip to another folder

1. With the SD card in stop or play mode, press and release the Folder Down button. The first file of the next folder will be displayed.

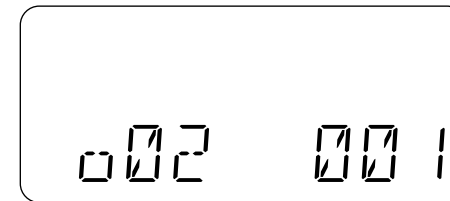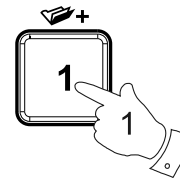

Repeat, Intro, Random play

The DCR-10 allows you to use the same playback options for files as can be used for conventional audio CDs. In addition to Repeat One, Repeat All, Repeat Intro and Repeat Random options, there is also a Repeat Folder facility.



Recording to SD card

Your DCR-10 radio has been designed to allow you to make recordings to SD / SDHC cards. Recording are made in WAV(FM mode), MP2(DAB mode), M4A(DAB+ mode) format.

SD/SDHC must use the FAT or FAT32 file system in order to operate with the DCR-10. Such media is usually supplied already formatted or can be formatted using a PC with a suitable card reader (for SD/SDHC cards).

It is possible to record onto media which already contains files written by the radio or using your computer. The recorded files will be added to those already present on the media.

GB



Making a recording





1. Select the desired source for the recording (DAB+ and FM).
Set the volume to the required listening level (the volume of the recording will not be affected by this).
2. Insert the media on to which the recording is to be made.
3. Press and hold the Record button. The display will show "RECORD".
4. In order to stop the recording press the Record button once more.
Recording will stop and a file will have been written to the SD card.

Files that have been written to the SD card are held in folders according to the source used for the recording:

DAB Rec Folder	for recording from DAB+
FM Rec Folder	for recording from FM

Note:

The SD card should only be removed when recording is stopped. Removing media while recording is in progress may corrupt data on the card leading to the loss of files previously written.

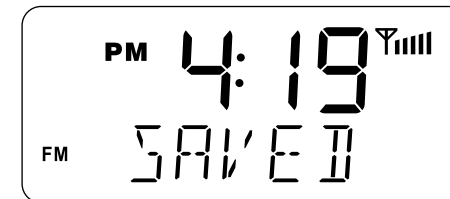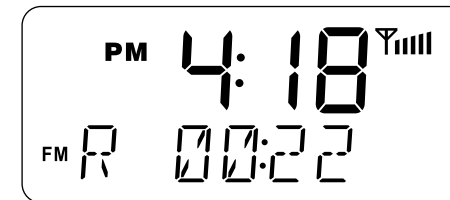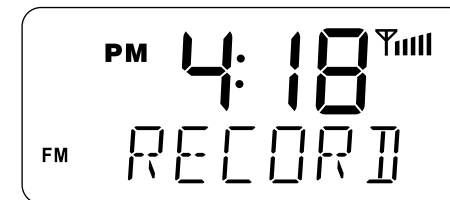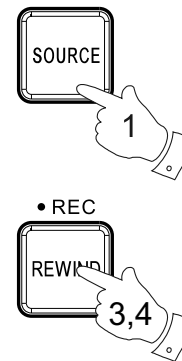

iPod docking

Your DCR-10 has an iPod dock facility which allows you to play digital audio files and soundtracks held on your iPod directly.


The DCR-10 uses the Universal Dock Connector developed for use with iPods. Recent models of iPod are supplied with adaptor inserts which ensure correct alignment of the iPod with the electrical connector.

1. Ensure that the radio is in standby. Carefully remove the iPod dock connector cover from the top of your radio.
2. Place the iPod docking adaptor into the iPod docking recess so that it is securely seated.
3. Carefully place your iPod on the universal iPod dock connector then press the Standby/Sleep button to switch on the radio. To avoid possible damage to either device, not use your iPod without the correct adaptor fitted in the dock connector.
4. To select the iPod mode press the Source button until "IPOD" shows on the display. If it was previously playing, your iPod will switch on and continue playing from where it was previously stopped.



Note:

The DCR-10 radio is able to recharge your iPod's internal battery.

Your iPod will use its backlight settings as configured. If these need changing, use the iPod's Settings menu.


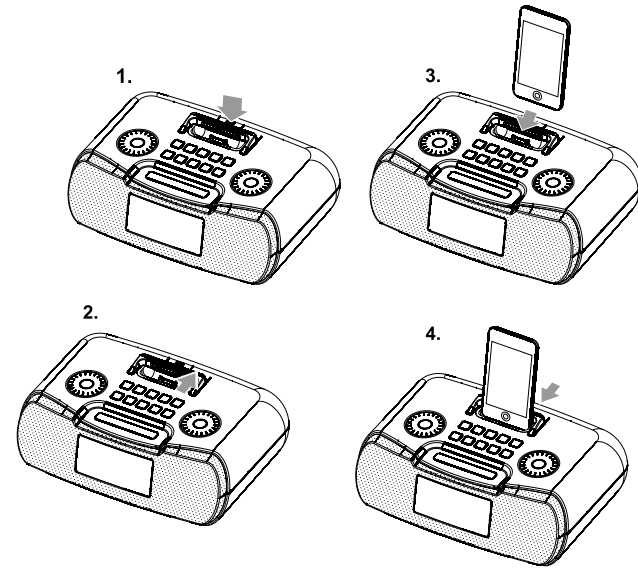


GB

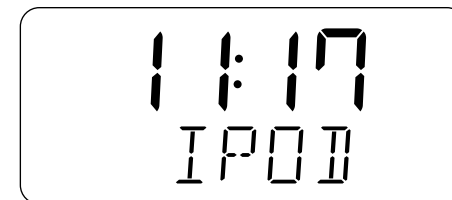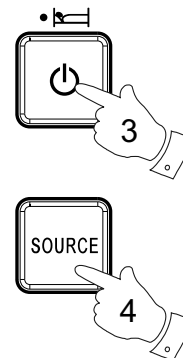

Navigating your iPod

1. Use the Menu button on the remote control to navigate to higher level menus on your iPod.
2. Use the Folder Up or Down buttons on the remote control as required to move up and down a menu screen on your iPod.
3. Press the Select button to choose the highlighted on screen menu item. If this item is a lower level menu item, you may then navigate further using the Folder Up or Down and Select buttons.

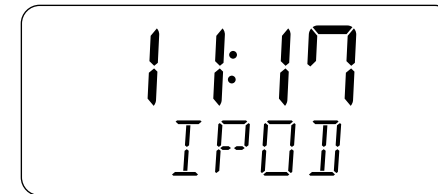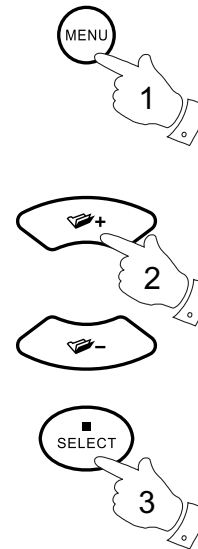

Playing a file on your iPod




1. When you have found the required item use the Select button to start the iPod playing (or the Play/Pause button).
2. Adjust the volume to the required setting using the Volume control on your radio.
3. To pause playback press the Play/Pause button. To resume playback press the Play/Pause button again.
4. iPod's do not have a Stop button (they use the Pause function). To play an alternative selection, use the iPod menus to make the selection using the Play/Pause button to stop playing the current item if needed.

Note:

iPods vary in how they respond to the Play/Pause button dependent upon the iPod model and software revision. Play/Pause may pause and resume the current selection, or it may pause the current selection and then start playing a new selection.

Search function

1. While the iPod is playing, press and hold the Fast-forward or Rewind buttons.
2. Release the button when the desired part of the item is reached.

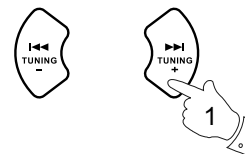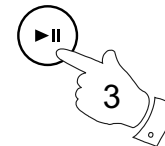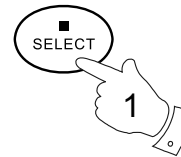

GB

Repeat playing files in your iPod

There are various repeating modes for playing files in your iPod, and for playing the SD card as well. This function can only be operated with the remote control.

Repeat a single file

1. While the iPod is playing, press the Repeat button until the repeat single file symbol appears in the iPod display. The currently playing item will be repeated.

Repeat all




2. While the iPod is playing, press the Repeat button until the repeat all files symbol appears in the iPod display. All files in the current album or playlist will be repeated.

Repeat cancel

3. While the iPod is playing, press the Repeat button until the repeat symbol is removed from the iPod display. Remaining files in the current album or playlist will be played.

Shuffle

4. While the iPod is playing, press the Random button to control the shuffle symbol in the iPod display. The tracks in the current album or playlist will be played in random when shuffle is enabled.

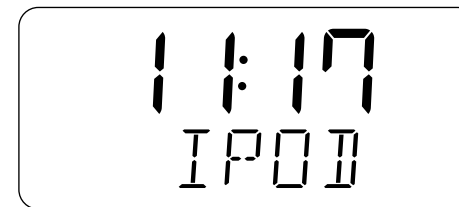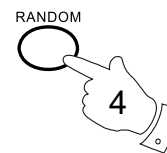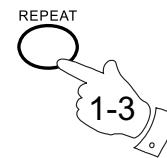

**Your DCR-10 works with the following models
of iPod:**



iPod classic
120GB 160GB (2009)



iPod
4th generation
20GB



iPod
5th generation
(video)
30GB



iPod nano
1st generation
1GB 2GB 4GB



iPod touch
1st generation
8GB 16GB 32GB



iPod
3rd generation
10GB 15GB 20GB



iPod
4th generation
40GB



iPod
5th generation
(video)
60GB 80GB



iPod nano
2nd generation
(aluminum)
2GB 4GB 8GB



iPod touch
2nd generation
8GB 16GB 32GB



iPod
3rd generation
30GB 40GB



iPod
4th generation
(color display)
20GB 30GB



iPod nano
3rd generation
(video)
4GB 8GB



iPod mini
4GB 6GB



iPod
4th generation
(color display)
40GB 60GB



iPod nano
4th generation (video)
8GB 16GB



iPod nano
5th generation (video camera)
8GB 16GB


GB

Clock and Alarms

Alarms

Your DCR-10 radio has two alarms which can each be set to wake you to DAB+, FM radio, SD card, iPod or buzzing alarm. The alarms may be set while the unit is in standby mode or while playing.

1. Before setting an alarm ensure that the clock time is set.
Press and release the Alarm button. "ALARM 1" will show on the display.
2. Rotate the Tuning control to select the required alarm, 1 or 2.
Press and release the Select button to cause "SETTING" to show on the display.
3. Press and release the Select button to choose alarm setting.
"On/Off" will show on the lower line of the text display.
4. Rotate the Tuning control to choose whether to set the alarm to ON or OFF.
5. Press and release the Select button. If the previous selection was to switch on the alarm, then alarm time will show on the lower line of the text display and the Alarm hour digits will flash.
If Off was selected, the unit will exit the alarm menu.
6. Rotate the Tuning control to choose the alarm hour and then press and release the Select button to enter the hour setting.
The Alarm minute digits will then flash on the display.

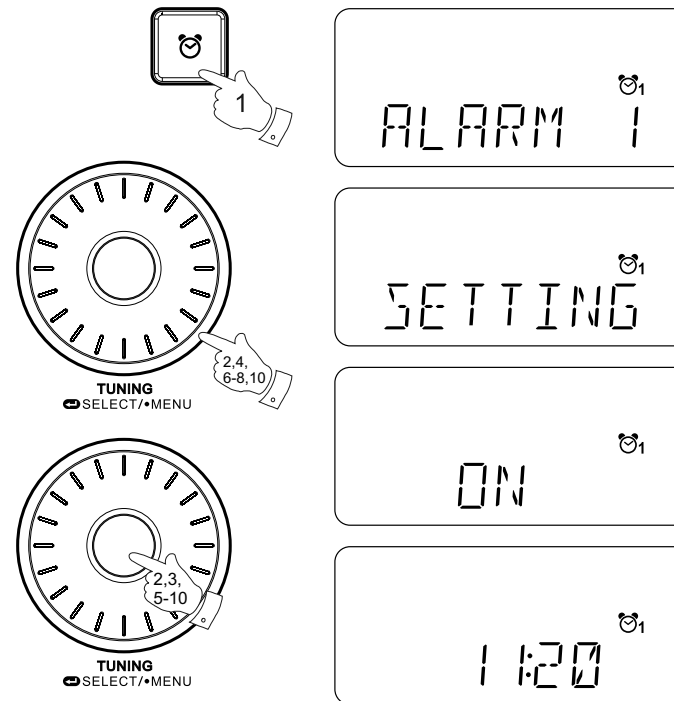

7. Rotate the Tuning control to choose the alarm minute and then press and release the Select button to enter the minute setting. Alarm frequency will show on the lower line of the text display.

8. Rotate the Tuning control to select the required option and then press the Select button to confirm the setting.

Your alarm can be set to the following options:

- Once - will sound once in the next 24 hours only
- Daily - will sound everyday
- Weekdays- will sound only on weekdays
- Weekends- will sound only on weekends

9. Press and release the Select button to select the alarm mode. Alarm mode will show on the lower line of the text display.

10. Rotate the Tuning control to choose the required alarm mode and then press the Select button to confirm the setting.

 
 
Each alarm can be set to any of the following modes:

- DAB+ - will wake you with DAB+ radio
- FM - will wake you with FM radio
- SD card - will wake you from SD card
- iPod - will wake you playing your iPod
- BUZZER - will wake you with a buzzer alarm

Note:

If the alarm type selected is iPod/SD card but your iPod/SD card is not docked or inserted when the alarm is sounding, the buzzer alarm will be used instead.





11. The alarm has now been set and the unit will revert to the previous display. The alarm indicator (alarm 1 or 2) will show on the display.


To view an alarm setting, select "VIEW" instead of "SETTING" at steps 2 and 3. The display will show successively the alarm details.

Note:

When the alarm is set to wake by DAB+ or FM radio, the last used DAB+ or FM station will be used and the alarm volume will be the volume previously listened to.

Cancelling alarms



1. While an alarm is sounding it can be cancelled by press the Standby/Sleep button.
2. To cancel an alarm at any other time, enter the alarm setup menu and set the alarm On/Off option to "OFF".

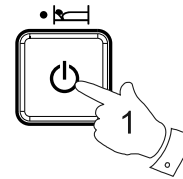

GB

Snooze


1. When the alarm sounds, pressing the Snooze/Dimmer button will silence the alarm for five minutes. The snooze symbol will appear in the display.
2. To adjust the snooze timer duration, press and hold the Tuning control and rotate the Tuning control until "SNOZ DUR" appears on the display. Press and release the Select button, then rotate the Tuning control to adjust the silence time from 5, 10, 15, 20, 25 and 30 minutes. Press and release the Select button to confirm the setting.
3. To cancel the snooze while the alarm is suspended, press and release the Standby button.

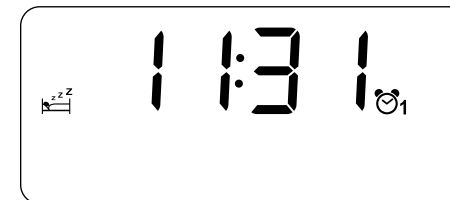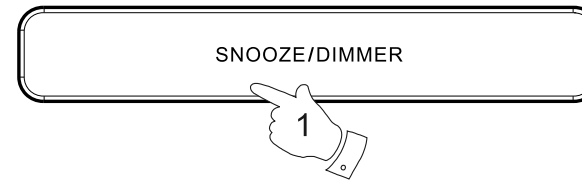

Sleep function

Your radio can be set to turn off after a preset time has elapsed. The sleep setting can be adjusted between 15 and 120 minutes.

1. To use the sleep timer, press and hold the Standby/Sleep button to enter the sleep setup. "SLEEP XX" will appear on the display.
2. Rotate the Tuning control to select the desired sleep time, or repeatedly pressing the Standby/Sleep button. The options are 15, 30, 45, 60, 90 or 120 minutes. Use the OFF option to cancel the sleep function. Press and release the Select button to confirm the setting.
3. Your radio will switch off after the preset sleep time has elapsed.

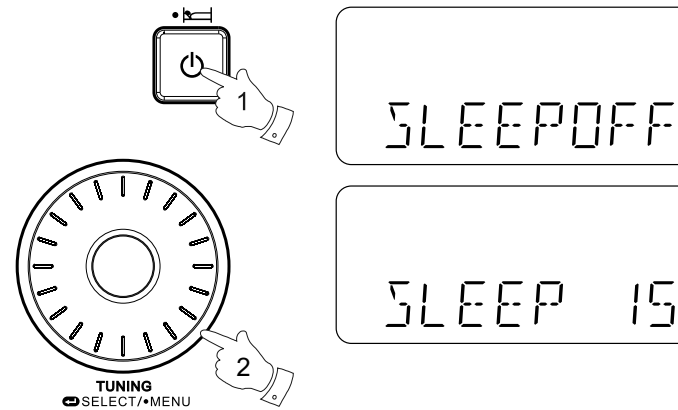


Setting the clock manually

The DCR-10 will automatically set its clock when tuned to a DAB+ radio station or to an FM station which is broadcasting the time via RDS.

If the clock cannot be set using DAB+ or FM radio then you will need to set the clock manually before the alarm function can be used. The clock may be set while the unit is in standby mode or while playing.

If it becomes necessary to set the clock manually, please follow these steps.

1. Press and hold the Tuning control, and rotate the Tuning control until the display shows SYSTEM. Press the select button, and rotate the Tuning control until TIME FMT shows on the display.
2. Press and release the Select button to choose the time format. Rotate the Tuning control to choose either 12H or 24H.
3. Press and release the Select button to enter the setting.
4. Press and hold the Tuning control, and rotate the Tuning control until "Time Set" appears on the display. Press and release the Select button and "AUTO CLK/MANUAL" will appear on the display. Rotate the Tuning control to choose Manual, and press and release the Select button. The hour digits on the lower text display will flash.

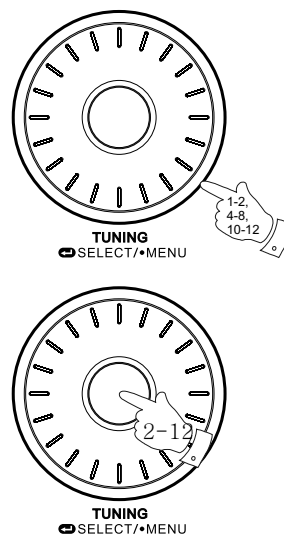

SYSTEM

TIME FMT

12H

TIME SET

MANUAL

GB


5. Rotate the Tuning control to change the hour digits as needed.
Press and release the Select button to confirm the hour setting.
The minute digits on the display will flash.
6. Rotate the Tuning control to change the minute digits as needed.
Press and release the Select button to confirm the minutes setting.
7. Press and hold the Tuning control and rotate the Tuning control until "Date Fmt" shows on the display. Press and release the Select button to choose the Date format.
8. Rotate the Tuning control to change the date format as needed, and press and release the Select button to confirm the date format setting.
9. Press and hold the Tuning control and rotate the Tuning control until "Date Set" appears on the display, and press and release the Select button. The month on the display will flash.
10. Rotate the Tuning control until the desired month is set.
Press and release the Select button to confirm the month setting.
The date will flash on the display.
11. Rotate the Tuning control until the desired date is set.
Press and release the Select button to confirm the date setting.
The year digits will flash on the display.



08:55




DATE FMT

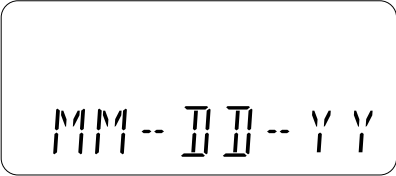

MM--DD--YY



DATE SET

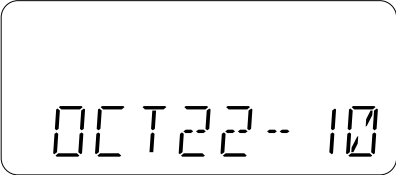


OCT22--10

12. Rotate the Tuning control until the desired year is set.
Press and release the Select button to confirm the year to complete the clock and date setting. The display will revert to the display for the previous operating mode.

Setting the clock time using RDS CT

1. When tuning to a station transmitting RDS data, press and hold the Tuning control.
2. Rotate the Tuning control until "TIME SET" appears on the display.
Press the Select button to enter the setting.
3. Rotate the Tuning control until "AUTO CLK" appears on the display.
Press the Select button to confirm the setting. The clock time of the radio will set up automatically according to the RDS data received.

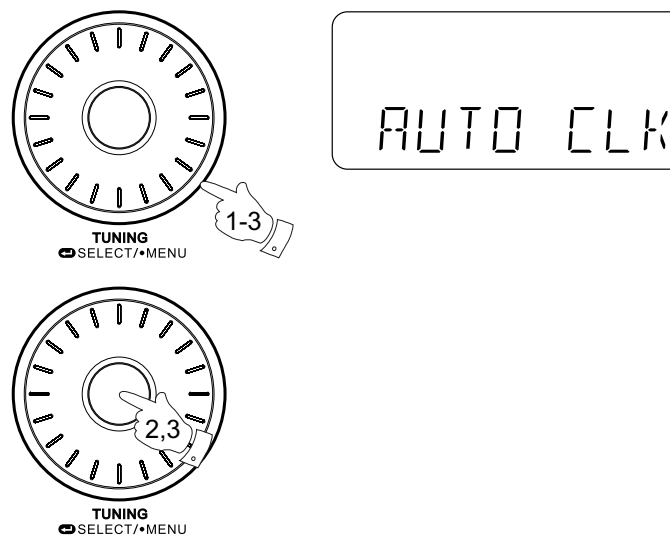

Audio and Setup

Brightness control

The brightness of the display may be adjusted. If you use the unit in the bedroom, you may prefer a lower brightness level than the standard setting.


1. Press and release the Snooze/Dimmer button repeatedly to adjust the brightness level of the LCD display. The backlight level will change with 5 different illumination levels so that you can see the effect of the change.
2. Stop when the desired backlight level is selected.



Equalizer function

The sound on your radio can be adjusted to suit your personal taste for the material that you are listening to. The DCR-10 has six preset equalizer modes. Alternatively, you may set the treble and bass levels to your own preferences.


1. Press the Volume control and rotate the Tuning control to cycle through the various modes.
 - a. Flat – no tone modification is applied
 - b. Jazz
 - c. Rock
 - d. Classic
 - e. Pop
 - f. News
 - g. User set – treble and bass settings may be adjusted

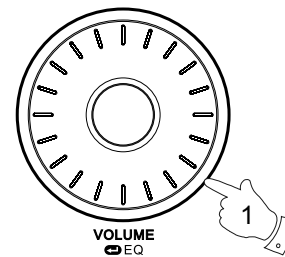


GB

Bass control


2. Rotate the Volume control until "USER SET" appears on the lower line of the text display. Then press and release the Select button.
3. The current bass setting will be shown on the lower line. Rotate the Tuning control until the desired level is displayed.
4. If you wish also to adjust the treble, then press the Select button after the setting of bass control is completed.

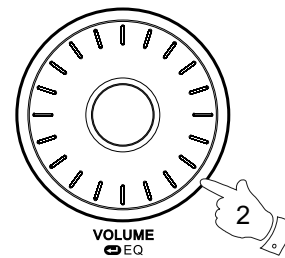

USER SET

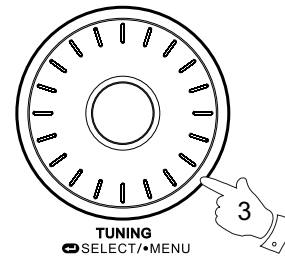


BASS 0

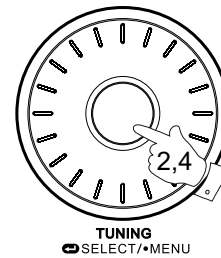


Treble control


5. Press the Volume control and rotate the Tuning control until "USER SET" appears on the display. Press the Select button twice until "TREBLE" appears on the lower line of the text display.
6. To adjust the treble setting rotate the Tuning control until the desired level is displayed.
7. Press the Select button to revert to the play mode display.

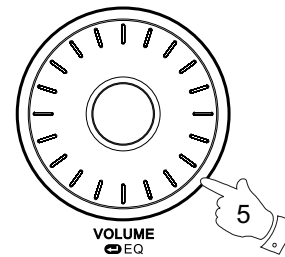

USER SET

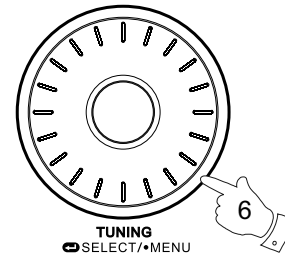

TREBLE 0

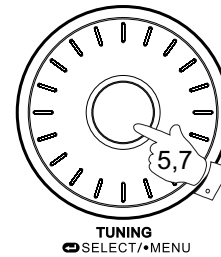


GB

Mute function

Pressing the Mute button on the remote will mute the output from the loudspeakers.



1. Press the Mute button will mute the sound output. "MUTE" will appear on the display.
2. Press the Mute button again or rotate the Volume control to un-mute the sound output.

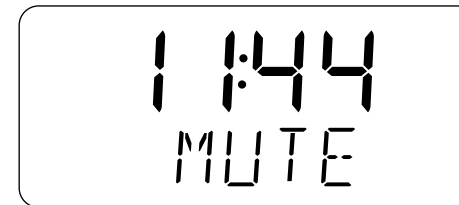

Auxiliary input socket

A 3.5mm stereo Auxiliary Input socket is provided on the rear of your radio to permit an audio signal to be fed into the unit from an external audio device such as iPod, MP3 or CD player.

1. Repeatedly press and release the Source button until "AUX IN" is displayed.
2. Connect an external audio source (for example, iPod, MP3 or CD player) to the Auxiliary input socket.
3. Adjust the volume setting on your iPod, MP3 or CD player to ensure adequate signal level from the player, and then use the Volume control on the radio as needed for comfortable listening.

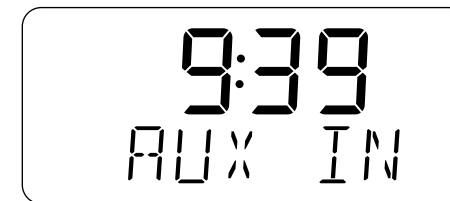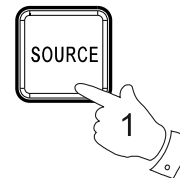



Line Out socket

A 3.5mm stereo Line Out socket is provided on the rear of your radio to permit the audio signal to be fed to an external amplifier or other audio device.

Inserting an audio cable into this socket will not mute the internal loudspeaker. Set the volume control to a low level if desired.

Headphone socket

A 3.5mm stereo Headphone Socket is provided on the rear of your radio for use with headphones. Inserting a plug automatically mutes the internal loudspeakers.

IMPORTANT:

Excessive sound pressure from earphones and headphones can cause hearing loss.

GB




Information

System reset


If your radio fails to operate correctly, or some digits on the display are missing or incomplete carry out the following procedure.

1. Press and hold the Tuning control and rotate the Tuning control so that the display shows "SYSTEM" on the lower line of the text display.
2. Press the Select button to enter the menu. Rotate the Tuning control until the displays shows "RESET".
3. Press and release the Select button. The display will show "YES" or "NO".
4. Rotate the Tuning control to select Yes, and press and release the Select button again to confirm the reset operation.
5. After a system reset, all radio station presets will be set to empty. Alarms will be cancelled, and all other settings will have been set to their default values. The clock will be reset and the unit will behave as when first switched on.

In case of malfunction due to electronic discharge, reset the product using the above procedure. In some circumstances it may be necessary to disconnect and then reconnect the mains power in order to resume normal operation.

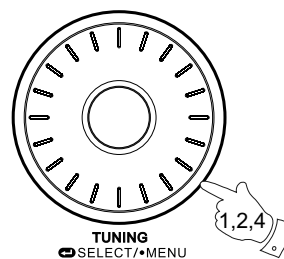

SYSTEM

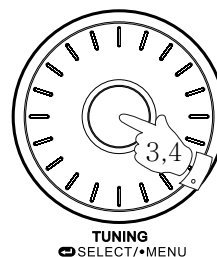

RESET


YES

PLS. WAIT

Software version

The software display cannot be altered and is just for your reference.

1. Press and hold the Tuning control and rotate the Tuning control until the display shows SYSTEM, and press the Select button to enter the menu.
2. Rotate the Tuning control until the display shows "SW VER", and press and release the Select button so the display shows the software version number shows on the display.

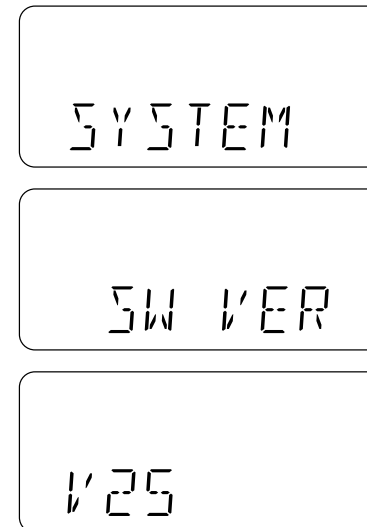

SD card slot for software upgrade

Software updates for your radio may be available in the future. As software updates become available software and information on how to update your radio can be found at <http://sg.sangean.com.tw/first/first.asp> <http://www.sangean.eu/first/first.asp> www.sangean.com.au. For more information, please contact our Head Office by sending an email to info@sangean.com.

GB

Specifications

Power Requirements

Mains DC 12V ~/ 1A

Frequency range

FM: 87.5 – 108 MHz

DAB+: 174.928 – 239.200 MHz

Circuit Features

Loudspeaker 2.5" 8 ohm full range

Output Power 2.5 Watt

Headphone socket 3.5mm dia

Auxiliary socket 3.5mm dia

Line out socket 3.5mm dia

Aerial System FM wire aerial



If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)